


motorcycle alarm system

Manual and warranty card

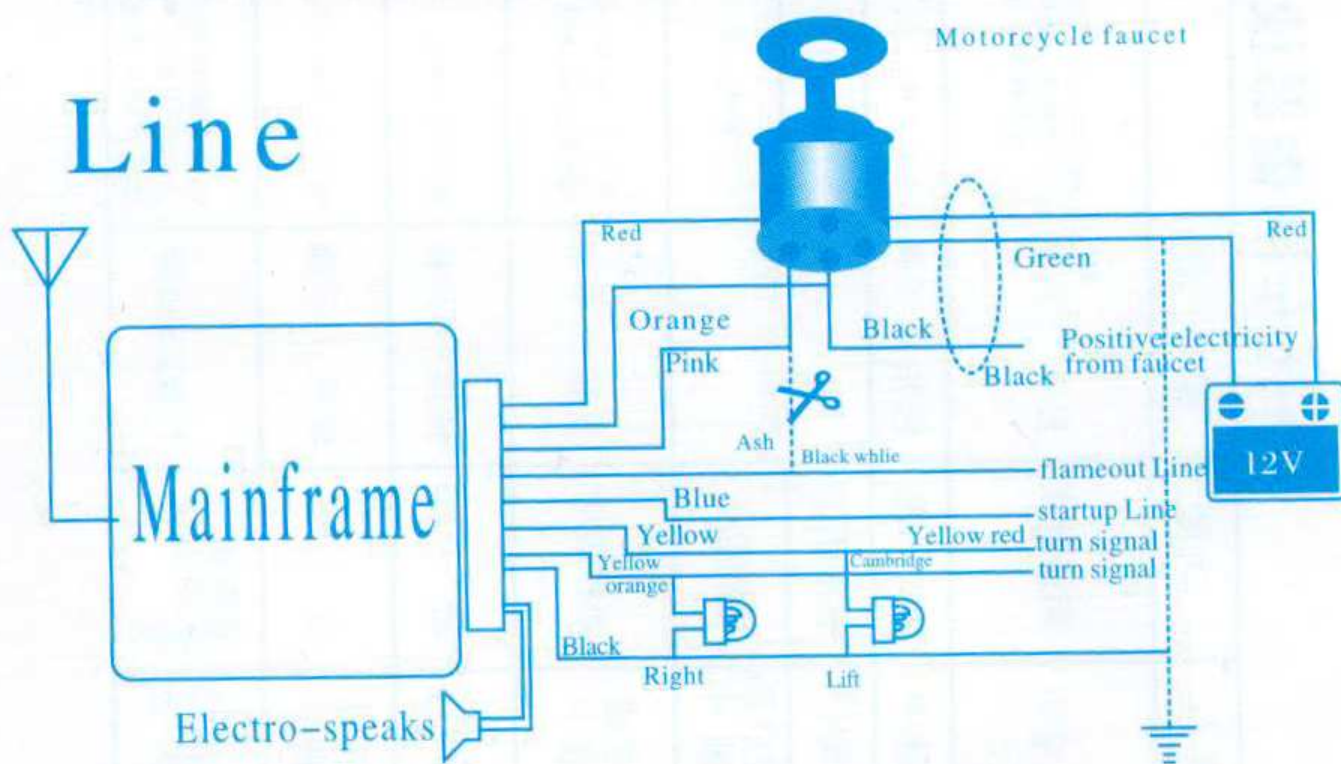

Operation Instruction for Burglary Alarm of Motorcycle(electric starting)

Key	State	Function	Operation	Description
Setup	Normal	Burglary Alarm	Press ** once	The horn rings once and enters burglary alarm state automatically after 3 seconds. 1.Pre-alarm: The horn rings once and enters burglary alarm state automatically after 3 seconds. 2.Emergency alarm :In alarm state, the horn rings if the motorcycle is started with key by force and the engine is lockde.
	Driving	Robbery alarm	Press ** once	The horn long rings,direction lights flash rapidly and engine is extinguished.
Unlock	Alarm	Release burglary alarm	Press ** once	Direction lights flash twice and the horn rings twice.
	Remote start and driving	Remote extinguish		Cut off power supply immediately;the vehicle is stopped and engine is extinguished.
Start	Normal or alarm	Remote start	Press ** twice	Start the vehicle immediately;repeat the operation if the vehicle isn't started due to cole engine.(note:** key is invalid when electric switch is unlockde.) ⊗ Side no such function
Ring	Driving	Overtake	Press ** once	The horn rings for 10 seconds and direction lights flash at the same time to indicate overtaking.
	Normal or alarm	Search for vehicle	Press ** once	The horn rings for the times to indicate its position; press and key to stop the ringing.
	Unlocked or burglary Alarm	Adjust vibration sensitivity Remotely	Long press ** for 2.5 seconds	Long Press ** for 2 seconds to enter vibration sensitivity adjustment(Level 1-4).The default sensitivity level for the 4 (Level 1 sends prompt tone only once and Level 4 sends for four times. Press ** key to confirm selection when prompt tone is sent.)